



## Playstation 3 Rapid Fire (Call of Duty Titles)

Thank you for your Evil Controller purchase! We would like to begin by explaining the features included with this controller.

Your controller features-

### 1. Rapid Fire

- **Rapid Fire is firing glitch that allows you to shoot semi-automatic and single shot weapons extremely fast.**



#### STEP 1 RAPID FIRE GAME MODES

Depending on the game you are playing will determine what mode to select. First read over the list and decide which game you are playing.

- Use 1st off
- Use 2nd mode for Call of Duty: Black Ops
- Use 3<sup>rd</sup> mode for Medal of Honor (Burst Fire)
- Use 4<sup>th</sup> mode for Call of Duty: Modern Warfare 2
- Use 5<sup>th</sup> mode for Call of Duty: World at War
- Use 6<sup>th</sup> mode for Call of Duty: Modern Warfare
- Use 7<sup>th</sup> mode for KillZone 3



#### STEP 2 SELECT GAME MODE

Once you have decided on the game, follow these steps to enter that Rapid Fire GAME MODE.

- Press and **hold** the MODE button (backside of your controller near top)
  - While holding the MODE button, tap the Rapid Fire button 1 time (Located on backside right of controller)
  - Ex. For Modern Warfare 2 (mode 4), you would hold the MODE button and tap the Rapid Fire button (backside right) 4 times.
  - Once you have selected your mode, let go of all the buttons.
- To operate Rapid Fire
  - Simply press and **hold** the button on the backside right of the controller.