



REMAPPING YOUR PADDLES

Please Note: This feature was optional at the time of purchase and may not be included.



1. Press and hold the Touchpad Button, then press and hold the Paddle you would like to remap.



2. The light bar will flash, now let go of all buttons.



3. Press any input you would like assigned to the paddle.

Note: If you would like to clear out all inputs for a paddle, press the Touchpad Button again during this step.



4. Complete.
Your Paddle has now been remapped.

TRIGGER REMAPPING: Trigger Remapping is also possible on PS4 units that include the SHIFT paddles. Follow the above directions to remap the triggers and replace actions performed with the paddles to actions performed with the triggers.