



RAPID FIRE

FOR XBOX ONE®

INSTRUCTION MANUAL



HOW-TO VIDEOS ON
TINYURL.COM/EVIL-INSTRUCTIONS

W WELCOME TO THE EVIL FAMILY

 
You are now the proud owner of an Evil Controller!

The Evil Rapid Fire controller includes 5 different features compatible with Call of Duty®, Battlefield®, Titanfall™, Destiny®, Dead Rising 3®, Watch Dogs™, Halo® and many more titles.

Our Adjustable Rapid Fire feature is compatible with all major first-person shooters and allows you to fine-tune the rate of fire in your favorite titles. This controller also includes 10 easy-to-use Rapid Fire slots and 10 additional customizable profiles.

To maximize your potential, be sure to fully read the instructions before operating. For updates on the latest games and support, visit evilcontrollers.com or call 877-880-3845.


1 GETTING STARTED

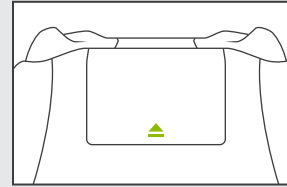

BATTERIES

Insert two AA batteries.

 Batteries near depletion may affect performance.

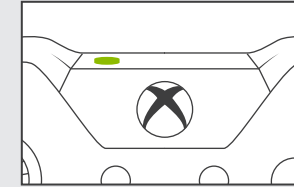


SYNC

Press and hold the connect button for 3 seconds. LED will blink quickly.

Point controller toward Kinect™ sensor or press the connect button on the console.

 The Xbox® button will stay lit when connected.

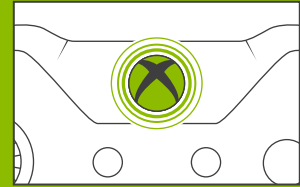

LED / RUMBLE

Button combos will trigger LED and Rumble feedback.

The Guide Button LED will pulse in a heartbeat pattern when Rapid Fire is activated.

1 Rumble = Mod OFF
2 Rumbles = Mod ON

2 ABOUT PROFILES

Your Evil Controller comes with 20 customizable profiles. They operate just like classes in *Call of Duty*®. Simply select the profile (class) and assign mods (perks).

By default, the first 10 profiles have a fire rate equal to that of their profile number. For example, profile 5 = 5 shots per second. Learn how to modify these defaults under ADJUSTABLE RAPID FIRE.

UPON CONTROLLER ACTIVATION,
PROFILE 1 WILL AUTOMATICALLY BE SELECTED.

20 CUSTOMIZABLE PROFILES

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20

DEFAULT FIRE RATES

3 SELECT/CLEAR PROFILE

SELECT A PROFILE

Tap **X** (profile #) of times to choose desired profile. For example, tapping **X** 5 times = profile 5.



Hold for 2 seconds.

CLEAR ALL

Forgot what mods are on? Clear all in current profile.



Hold for 2 seconds.

4 PROGRAMMING MODS

RAPID FIRE



LEFT TRIGGER RAPID FIRE



AKIMBO RAPID FIRE



5 ADVANCED MODS

ADJUSTABLE RAPID FIRE



Hold for 2 seconds.

= Increase rate of fire.

= Decrease rate of fire.

= Lock rate of fire.

TAP to increase by one step.
HOLD to increase continuously.

It's possible for the rate of fire to be so fast that it doesn't register in-game. Slowing semi-automatic weapons down to reduce recoil and increase accuracy can be effective. Features 15,000 speed increments.



6 PROFILE FEATURES

CHECK PROFILE

Check current profile number. Pulse/Rumble indicates profile. For example, 5 pulses/rumbles = profile 5.



TOGGLE PROFILES ON/OFF

Quickly return controller to stock functionality.



LOCK

Prevent mods from being turned on/off during gameplay. Hold for 3 seconds. When LED pulses, release.



MASTER RESET

Restore the controller to factory settings. Do not perform this operation unless you want to overwrite all of your customized profiles. **This action cannot be undone.**

Note: Mods must be toggled off in order to perform Master Reset.

Hold for 10 seconds.



7 MOD GLOSSARY

RAPID FIRE

Increase the rate of fire of pistols and semi-automatics. Unload your magazine faster than your opponent.

LEFT TRIGGER RAPID FIRE

Increase the rate of fire of pistols and semi-automatics equipped on your left trigger.

AKIMBO RAPID FIRE

Increase the rate of fire on both triggers while dual wielding your primary weapon.

ADJUSTABLE RAPID FIRE

Create a preferred rate of fire for any weapon.