

## 4 PROFILE FEATURES

 
### CHECK PROFILE #

Check current profile number. LED will blink # to indicate profile.



### TOGGLE PROFILES ON/OFF

Quickly return controller to stock functionality.



### LOCK MODS

Prevent mods from being turned on/off during gameplay.

Hold for 3 seconds. When light bar flashes, release.



### CLEAR ALL

Clear all functions in current profile.



### MASTER RESET

Revert the controller's firmware to factory settings. Do not perform this operation unless you want to overwrite all of your customized profiles. **This action cannot be undone.**

*Note:* Mods must be toggled off in order to perform Master Reset.

Hold for 10 seconds.



HOW-TO VIDEOS ON [TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)



## INSTRUCTION MANUAL



HOW-TO VIDEOS ON  
[TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)

  
[WWW.EVILCONTROLLERS.COM](https://www.evilcontrollers.com)

## 1 CHOOSING A PROFILE

Your Evil Controller comes with 20 customizable profiles. They operate just like classes in Call of Duty®. Simply select the profile (class) and assign mods (perks).

By default, the first 10 profiles have a fire rate equal to that of their profile number. For example, profile 5 = 5 shots per second. Try them out and see how you like them. See **SECTION 3: ADVANCED MODS** to learn how to tweak these defaults.

**UPON PROFILE ACTIVATION, PROFILE 1 WILL AUTOMATICALLY BE SELECTED.**

### SELECT A PROFILE

Tap  (profile #) of times to choose a desired profile.



### 20 CUSTOMIZABLE PROFILES

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20

### DEFAULT FIRE RATES

## 2 ADDING MODS

Select a profile and enter the following button combos to activate the mods of your choice. Test in a private match.

*Note:* If using **TRIGGER SWITCH**, the following combos that reference **L2/R2** will be activated by **L1/R1**.

### RAPID FIRE

Increase the rate of fire of semi-automatics weapons.



To optimize the rate of fire in your game take a look at Advanced Mods to adjust your rate of fire.

### LEFT TRIGGER RAPID FIRE

Increase the rate of fire of semi-automatics weapons equipped on your left trigger.



### AKIMBO RAPID FIRE

Increase the rate of fire on both triggers while dual wielding.



### AUTO SCOPE / AUTO RUN



To enable Auto Run, tap L2 while moving.

 
2

### DROP SHOT

**Default Button Layout:** Press **X** to stand up and keep Drop Shot active. Press **O** to stand up and deactivate Drop Shot.

**Tactical Button Layout:** Press **X** to stand up and keep Drop Shot active. Press **RS** to stand up and deactivate Drop Shot.

#### DEFAULT

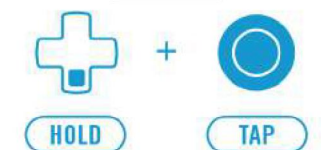

OR

#### TACTICAL



### TACTICAL RAPID FIRE

Toggle Rapid Fire on/off. Useful when primary and secondary weapons have different fire rates.

- 1 Activate mod. Pressing **▲** to swap weapons will also toggle Rapid Fire on/off.



- 2 Toggle Rapid Fire on/off without switching weapons.

 


- 3 Return to standard Rapid Fire.



3

### AUTO SPOT *Battlefield 4® Only*



Automatically spot an enemy if they appear on screen.

## 3 ADVANCED MODS

### ADJUSTING RATE OF FIRE



- = Increase rate of fire.
  - = Decrease rate of fire.
  - = Lock rate of fire.
- TAP to increase by one step.  
HOLD to increase continuously.

3

 
It's possible for the rate of fire to be so fast that it doesn't register in-game. Slowing automatic weapons down to reduce recoil and increase accuracy can be effective. Features 15,000 speed increments.



4

### FAST RELOAD *Call of Duty: Ghosts* *Call of Duty: Modern Warfare*

Reload weapons very quickly. It functions like the Sleight of Hand perk, but does not animate in a similar manner. Because weapons reload at different rates, Fast Reload must be programmed and adjusted accordingly.

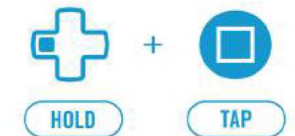

- 1 Equip your gun of choice.
- 2 Fire off a few rounds.
- 3 Press and hold **d-pad down** and **□** to reload.
- 4 Release **d-pad down** and **□** when the bullet counter shows a full magazine.
- 5 Fire off a few more rounds.
- 6 Test the reload by tapping **□**.
- 7 Hold **R2** after tapping **□** and your gun will immediately fire once the Fast Reload is complete. The animation may appear "glitchy", but that's just the mod cutting away the unnecessary animation.

*Note:* Holding **d-pad down** and **□** will restart the programming process.

### JITTERMOD (AUTO BURST) *Call of Duty: MWR Only (M16A4)*

Enter a profile then,



Activating jitter will disable Rapid fire. Repeat function to disable jitter and reactivate Rapid Fire.



HOW-TO VIDEOS ON  
[TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)

5