

**RAPID FIRE**

Increase the rate of fire of pistols and semi-automatics.  
Unload your magazine faster than your opponent.

**LEFT TRIGGER RAPID FIRE**

Increase the rate of fire of pistols and semi-automatics  
equipped on your left trigger.

**AKIMBO RAPID FIRE**

Increase the rate of fire on both triggers while dual wielding  
your primary weapon.

**ADJUSTING YOUR RATE OF FIRE**

Create a preferred rate of fire for any weapon.

HOW-TO VIDEOS ON [TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)

**INSTRUCTION MANUAL**

[WWW.EVILCONTROLLERS.COM](http://www.evilmotors.com)



HOW-TO VIDEOS ON  
[TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)

Your Evil Controller comes with 20 customizable profiles.  
They operate just like classes in Call of Duty®.  
Simply select the profile (class) and assign mods (perks).

By default, the first 10 profiles have a fire rate equal  
to that of their profile number. For example,  
profile 5 = 5 shots per second. Learn how to modify  
these defaults under **ADJUSTABLE RAPID FIRE**.

**UPON PROFILE ACTIVATION,  
PROFILE 1 WILL AUTOMATICALLY BE SELECTED.**

20 CUSTOMIZABLE PROFILES


1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20

DEFAULT FIRE RATES

## 2 SELECT/CLEAR PROFILE

### SELECT A PROFILE


Tap **X** (profile #) of times to choose desired profile. For example, tapping **X** 5 times = profile 5.



Hold for 2 seconds.

### CLEAR ALL

Clear all functions in current profile.




Hold for 2 seconds.

## 3 PROGRAMMING MODS


### RAPID FIRE

Increase the rate of fire of semi-automatics weapons.




See **Advanced Mods** for adjusting you rate of fire.

### LEFT TRIGGER RAPID FIRE

 


### AKIMBO RAPID FIRE



## 4 ADVANCED MODS

### ADJUSTABLE RAPID FIRE



Hold for 2 seconds.

- = Increase rate of fire.
- = Decrease rate of fire.
- = Lock rate of fire.


TAP to increase by one step. HOLD to increase continuously.

Each profile has its own adjustable rate of fire


## 5 PROFILE FEATURES

### CHECK PROFILE #


Check current profile number. Pulse/Rumble indicates profile. For example, 5 pulses/rumbles = profile 5.



### TOGGLE PROFILES ON/OFF




It's possible for the rate of fire to be so fast that it doesn't register in-game. Slowing automatic weapons down to reduce recoil and increase accuracy can be effective. Features 15,000 speed increments.



### LOCK

Prevent mods from being turned on/off during gameplay. Hold for 3 seconds. When LED pulses, release.




### MASTER RESET

Restore the controller to factory settings. Do not perform this operation unless you want to overwrite all of your customized profiles. **This action cannot be undone.**

**Note:** Mods must be toggled off in order to perform Master Reset.

Hold for 10 seconds



HOW-TO VIDEOS ON [TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)